

# Processing information for mineral materials (artificial stone)

## High gloss in just 3 steps!

Processing surfaces with Superpad P Wood and Useit® SG (possible gloss levels using example of a sheet of mineral material).

The table serves as a recommendation. The best sanding material for processing and for the desired gloss level is best determined through practical testing.

Choice of sanding material	matt	silk matt	high-gloss
Zebra Useit Superpad P Wood P 220	<b>0581 203 220</b>	<b>0581 203 220</b>	<b>0581 203 220</b>
	or		
Zebra Useit Superpad P Wood P 400	<b>0581 203 400</b>	and	and
Zebra Useit Superpad SG 600		<b>0587 403 060</b>	<b>0587 403 060</b>
			and
Zebra Useit Superpad SG 1500			<b>0587 403 150</b>
Zebra Useit Superpad SG 3000 for <b>mirror gloss</b> (sand wet)			<b>0587 403 300</b>

Sand out scratches and other imperfections in the surface with 80, 120, 150 or 180 grain.

### Processing raised edges (in conjunction with the 160 mm dia. Foam Adapter with 200 mm dia. Superpad Wood).



#### Foam Adapter

For eccentric sanders with a 150 mm adhesive plate. Suitable for extraction systems from Bosch and Festo (6 holes inside and 8 holes outside).

**Art. No. 0587 023 003**

P. Qty. 1

#### Note:

The overhanging Zebra Useit Superpad Wood (with 200 mm dia.) is secured under the 160 mm dia. Foam Adapter and pressed onto the raised edges of the wall connections. The Superpad then follows the profile of the wall joint.


### Processing radii and round corners with Sanding Sleeves, Sanding Rollers and Fan Wheels.



#### Useit® SG Sanding Sleeves<sup>1</sup>, Sanding Rollers<sup>2</sup>, Fan Wheels<sup>3</sup> and Filing Belts<sup>4</sup>

For sanding (finish sanding) of surfaces and tight radii.

**Art. No. 0587 7..**

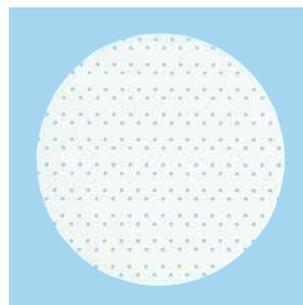

#### Useit® Dust Disc

The perforated disc for removing dust from surfaces.

#### Use:

Secure the dust disc under the adhesive plate and move over the sanded surface with the machine and vacuum cleaner running.

**Art. No. 0587 603 000**

P. Qty. 10